



Ounce for Ounce, The Best Pole on the Market.

Introducing The Carbon Pro+ Pole System With Kevlar

The Carbon Pro+ pole is an innovative high reach, water-fed system that is constructed of light weight carbon fiber reinforced with Kevlar using the latest bonding technology. This combination results in a unique pole system which is very light (Carbon Fiber) yet very rigid (Kevlar).

The reinforced aluminum joints ensure a secure connection between pole sections and employ a double O-ring design that creates a water tight seal. Pole segments are offered in three and five foot lengths allowing for heights to 65 feet.


And, the Carbon Pro+ pole system can be easily customized by mounting various brushes and accessories on to the pole.

It all adds up to the best pole system your money can buy.

The reinforced aluminum joints employ a double O-ring design that creates a water tight seal.



Unique Scrub 'n Rinse attachment with abrasive pad, works like magic on stubborn debris.

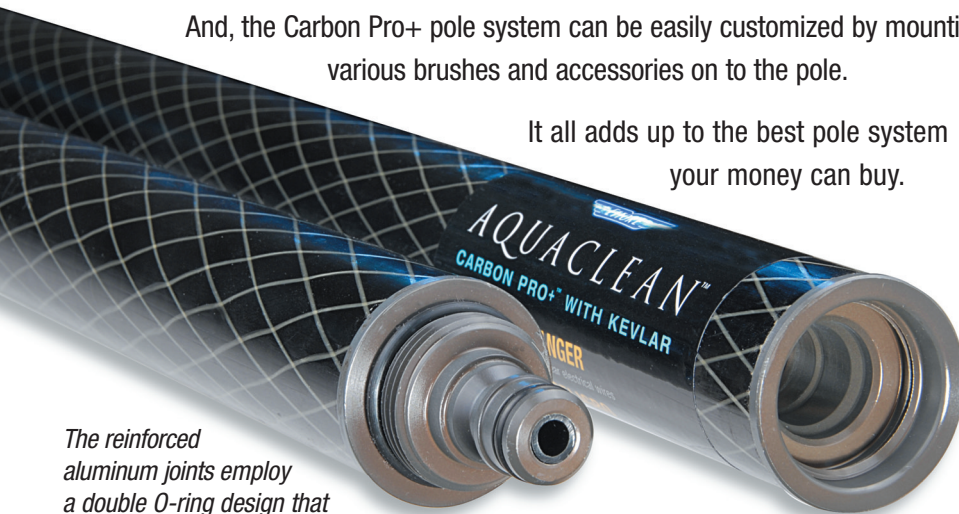

AQUACLEAN

PURE WATER TECHNOLOGY BY ETTORE

Features

3 foot and 5 foot pole sections.

1/2" diameter and smooth texture for easy handling.

Precision connectors provide exceptional strength yet allow for the quick addition or removal of pole sections.

Double O-rings ensure water tight connections.

Water flows through internal tubing.

Pole sections have an internal check valve which eliminates the need to drain the system when removing or adding sections.

Unique Scrub 'n Rinse attachment for stubborn debris.

Working height of up to 65 feet.

Ettore Products Company • P.O. Box 2164, Oakland CA 94621

T 800/438-8673 • 510/638-4870 F 800/648-9779 • www.ettore.com